


**MAKE / MODEL(S):
TOYOTA TACOMA**

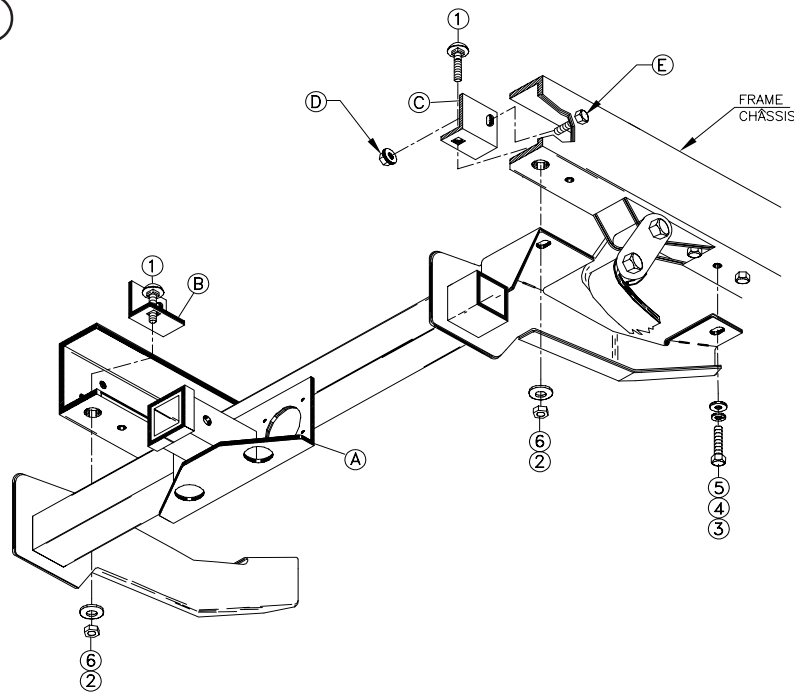

PARTS IDENTIFICATION / IDENTIFICATION DES PIÈCES (HARDWARE KIT NO. KA-8001-857)

A. Receiver assembly	A. Receveur	1. Carriage bolt	1/2" x 1 1/2" (2)	1. Boulon de carrosserie
B. Left reinforcing bracket	B. Support de renforcement gauche	2. Hex nut	1/2" (2)	2. Ecrou hexagonal
C. Right reinforcing bracket	C. Support de renforcement droit.	3. Hex bolt	10mm x40mm (2)	3. Boulon hexagonal
D. Flange nut (existing) (2)	D. Ecrou à rebord	4. Lock washer	10mm (2)	4. Rondelle de blocage
E. Hex bolt (existing) (2)	E. Boulon hexagonal	5. Flat washer	10mm (2)	5. Rondelle plate
		6. Conical washer	1/2" (2)	6. Rondelle conique dentee

TOOLS REQUIRED: 3/4", 14 mm, 17mm, 18mm, 19mm, socket an 3/4 inch wrench; ratchet or impact gun to suit; 100 FT/LB torque wrench.
OUTILS REQUIS: douille de 3/4 po, 14mm, 17mm, 18mm, 19mm; manche à rochet ou clé à chocs si nécessaire; clé dynamométrique à 100 lb-pi.

INSTRUCTIONS:

1. Remove the two rear most flange nuts (E) that fasten the bumper to the frame (one per side).
 2. Remove the two 10mm bolts along the bottom of frame (one per side) that are 16" back from the end of the frame.
 3. Loosely install reinforcing brackets (B & C) to the inside of the frame using the existing hardware (D & E) as shown in the illustration.
 4. Loosely fasten receiver assembly (A) to the frame with hardware as shown.
 5. Tighten the 1/2" bolts to 72 ft. lbs. and the 10mm bolts to 42 ft.lbs.
-
1. Enlevez les deux écrous à rebord de 12mm les plus en arrière (E) qui attachent le pare-chocs au châssis.
 2. Enlevez les deux boulons de 10mm dessous de la châssis (une par côté) 16 po en derrière de la fin de la châssis.
 3. Installez sans serrer les plaques de renfort (B & C) au côté de châssis en utilisant les fixations présents (D & E) tel que montré dans l'illustration.
 4. Attachez sans serrer le receveur (A) au châssis, tel que montré.
 5. Serrez les boulons de 1/2po.à 72 pi-lbs et les boulons de 10mm à 42 pi-lbs

WEIGHT CARRYING/ATTLEAGE AVEC RACCORD A BOULE

MAX GROSS TRAILER WEIGHT/
POIDS BRUT DE REMORQUE
5,000 lbs

MAX TONGUE WEIGHT/
POIDS MAX DU TIMON
500 lbs

WEIGHT DISTRIBUTION/ATTelage AVEC BARRES DE TORSION

5,500 lbs

550 lbs

Warning: This hitch is designed to safely carry the loads specified. Under no circumstances do we recommend exceeding the towing vehicle manufacturer's recommended vehicle towing capacities.
Avertissement: Cet attelage à été crée pour porter sans danger les charges prévues. En au cun cas vous ne devez dépasser les normes de capacités de remorquage établies par le fabricant de votre véhicule.